



## **PLATE WASHER PW**

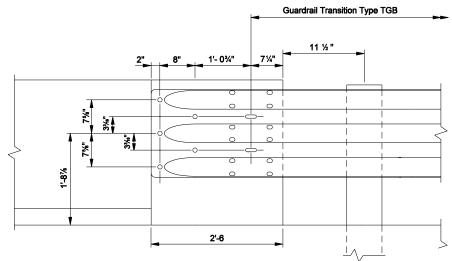

**PART ELEVATION** 

## NOTES:

- 1) These holes, required for the connection of the guardrail transition types TBC or TBT to the end of the concrete bridge railing transition, shall be preformed.
- 2. This drawing shall be used in conjunction with bridge railing transition type TBC as shown on Standard Drawing E 706-TTBC-01, or type TBT as shown on E 706-TTBT-01 and Guardrail transition type TGB as shown on Standard Drawing E 601-TTGB-01.



MARCH 2005

STANDARD DRAWING NO. E 706-CBRT-02



/s/ Richard L. VanCleave 3-01-05 DESIGN STANDARDS ENGINEER /s/ Richard K.Smutzer